

HOW TO REPLACE THE INK PAD IN A SELF-INKING STAMP

To replace an ink pad follow these instructions:



Press stamp down only about 2 or 3mm. If you do this whilst pressing the buttons at the side of the stamp it will stay there.

Push the ink pad out of the stamp and remove completely.



Get your new ink pad and push it in the slot making sure the ink side of the pad is facing downwards.



Now you are ready to use your new inked stamp.